Procedure For tuning Coship N 6752 From INSAT4B (93.5 E) to Intelsat 17 (66 E) for SUN TV NETWORK CHANNELS.

Requirement -RCU



1) Power off the receiver and remove LNB Cable.

2) Switch on the receiver and wait until the 'No Signal' or Searching for Signal' message displayed



3) Press Menu from remote and select 'Factory default' with left, right and down keys.



4) Input password 0000 and press'OK'



5) When 'No Service Available' Screen is displayed switch off the receiver



6) Connect the LNB cable to the receiver from new satellite (Intelsat 17) and power on the receiver

7) Go to Insatllation menu and select Advanced Installation menu and press 0000 for password.

	Installation	Easy Installation		Installation	Easy Installation			
	Manage Channel	Advanced Installation		Mana Channel	Password Installatio			
6	User Setup		\$	User Password	0008			
∎ö	Information	Upgrade Software	-ö	Information	Upgrade Software			
	Games		o	Games				

8) Press Yellow Key to edit Transponder and press OK to select the transponder.

	Adva	nced Installati						C TP Edit					Q	TP Edit			
1	SUN DTO	LNB Type	-	Standar		01	3885MHz/H/28000KS/s	Frequency		03885		01	3885MHz/H/28000KS/s	Frequency		03885	
	NewSat01	Low Freq		05150		02	4045MHz/H/28000KS/s	Symbol Rate		28000		02	4045MHz/H/28000KS/s	Symbol Rate		28000	
	NewSat02	High Freq		00000				Polarity		HOR				Polarity	-	HOR	•
	NewSat03	22K			•			Transmission	•	DVB-S	-			Transmission	•	DVB-S	•
	NewSat04	DiSEqC		OFF				FEC Rate		AUTO				FEC Rate		AUTO	
6	NewSat05	LNB Power		ON				Modulation		QPSK				Modulation		QPSK	
		Position Set		OFF				Pilot			-			Pilot NIT	•		•
	NewSat06	Concerns of the second													-		
8	NewSat07	TP Setup	43	885/H/28	000			Strength			00%			Strength			10%
19	NewSat08	Signal						Quality			1016			Quality			10%
	NewSat09	OK Select Sat	ellite t	o search	list		OK Select TP to search list			rch list		OK Select TP to searc				arch list	
6	Start Search 🔲 Rename	TP Edit					Start Scan 🚺 Delete TP	Add TP					Start Scan 🚺 Delete TP	Add TP			

9) Input the frequency as 3885 and Symbol Rate and other Tuning Parameters as shown below.

			TP Edit		-	
01	3885MHz/	H/28000KS/s	Frequency		03885	
02	4045MHz/I	H/28000KS/s	Symbol Rate		30000	
			Polarity	-	HOR	•
			Transmission	-	DVB-S2	•
			FEC Rate	-	3/4	•
			Modulation		8PSK	
			Pilot	-	ON	
			NIT	-	ON	
			Strength		90'	
			Quality		99	%
			OK Select TF	to sea	rch list	
6	Start Scan	Delete TP	Add TP			

10) Please Check the signal Level and Signal Qulaity are more than 90.

11) Press RED button to start the scanning.

12) Press Exit and the channels will be stored.